



Press to reset
Hold 5 seconds for bootloader

Port - connector - functions	
A0	- CN1.3 - Digital/Analog
A1	- CN1.4 - Digital/Analog
A2	- CN1.5 - Digital/Analog
A3	- CN1.6 - Digital/Analog
A4	- CN1.7 - Digital
A5	- CN1.8 - Digital/Analog
B0	- CN4.3 - Digital/Analog/I2C
B1	- CN4.4 - Digital/Analog/I2C
B2	- CN4.5 - Digital/Analog
B3	- CN4.6 - Digital/Analog
B4	- CN4.7 - Digital/Analog
B5	- Program Button
B6	- CN4.9 - Digital
B7	- CN4.10 - Digital
C0	- CN2.3 - Digital
C1	- CN2.4 - Digital/PWM
C2	- CN2.5 - Digital/PWM
C4	- USB
C5	- USB
C6	- CN2.9 - Digital/Tx
C7	- CN2.10 - Digital/Rx
D0	- CN3.3 - Digital
D1	- CN3.4 - Digital
D2	- CN3.5 - Digital
D3	- CN3.6 - Digital
D4	- CN3.7 - Digital
D5	- CN3.8 - Digital
D6	- CN3.9 - Digital
D7	- CN3.10 - Digital
E0	- CN1.9 - Digital/Analog
E1	- CN1.10 - Digital/Analog
E2	- CN2.6 - Digital/Analog